

To enter a programming session, follow the next few simple steps:

- 1) Press FEATURE * * 2 3 6 4 6
- 2) Enter Password: 2 3 6 4 6

Display will read: " System Speed Dials"

If you can not get to the password screen please go back and use the new system

Directions

Using the navigation keys, as displayed below, follow the next simple steps:



- 3) Press: NEXT

Display will read: "Names"

- 4) Press: Next

Display will read: "Time and Date"

- 5) Press: Show

Display will read: "Hour: ___"

- 6) Press: Change "softkey" 3 gray keys under display

Enter the hour

Display will read: A.M. O.K or Change "softkey"

Select which one you want to change

- 7) Press: NEXT

Display will read: "Minutes: ___"

Press change or o.k. "softkey"

- 8) Press: NEXT

Display will read: "Year: ___"

Press next or change "softkey"

9) Press: NEXT

Display will read: "Month: ___"

Press next or change "softkey"

10) Press: NEXT

Display will read: "Day: ___"

Press next or change "softkey"

11) Press: Next

Hit RLS you have programmed you time and date